




これまで、HandyConnectアプリを使った接続方法を、推奨しておりましたが、廃止に伴い、今後は、Handyverseアプリを使った接続方法を推奨させていただきます。

# Handy 「スマホ連携」 「PC連携」 の手順書 (HandyVerseの場合)



スマホによるHandy  
のコントロール

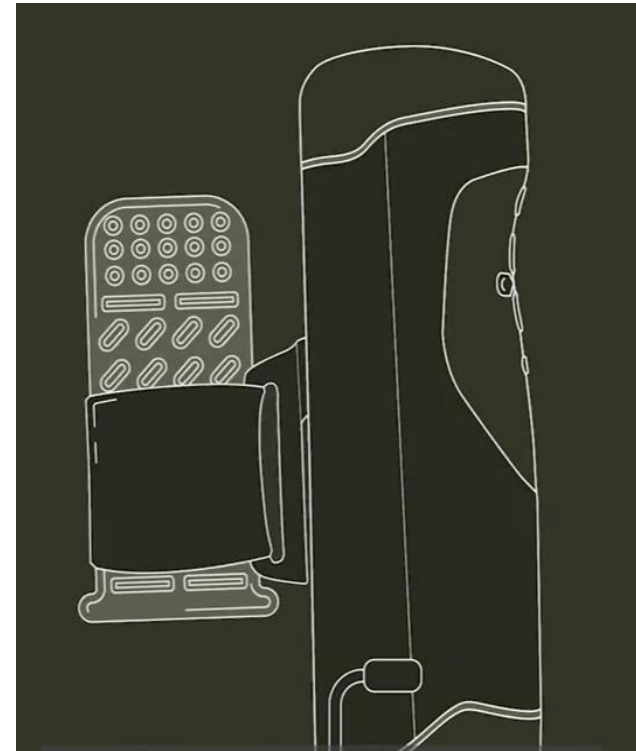

Handy本体

# ～目次～

## ●アプリの場合

1.前準備

2.フェーズ1

3.フェーズ2

## ●PCの場合

1.フェーズ1

2.フェーズ2

# (1) アプリの場合

# 1.前準備

アプリダウンロード

前準備①スマートフォンへのHandyVerseアプリのダウンロードする。  
前準備②スマートフォンのBluetoothモードをONにする。

①HandyVerseアプリをダウンロードする。



②スマートフォンのBlueToothモードをONにする。



## 2. フェーズ1


アプリとBluetooth機能を使ったHandyのWi-Fi接続

スマホをBluetoothモードONにしておく。


① HandyVersetアプリをクリック



② メニューをクリック

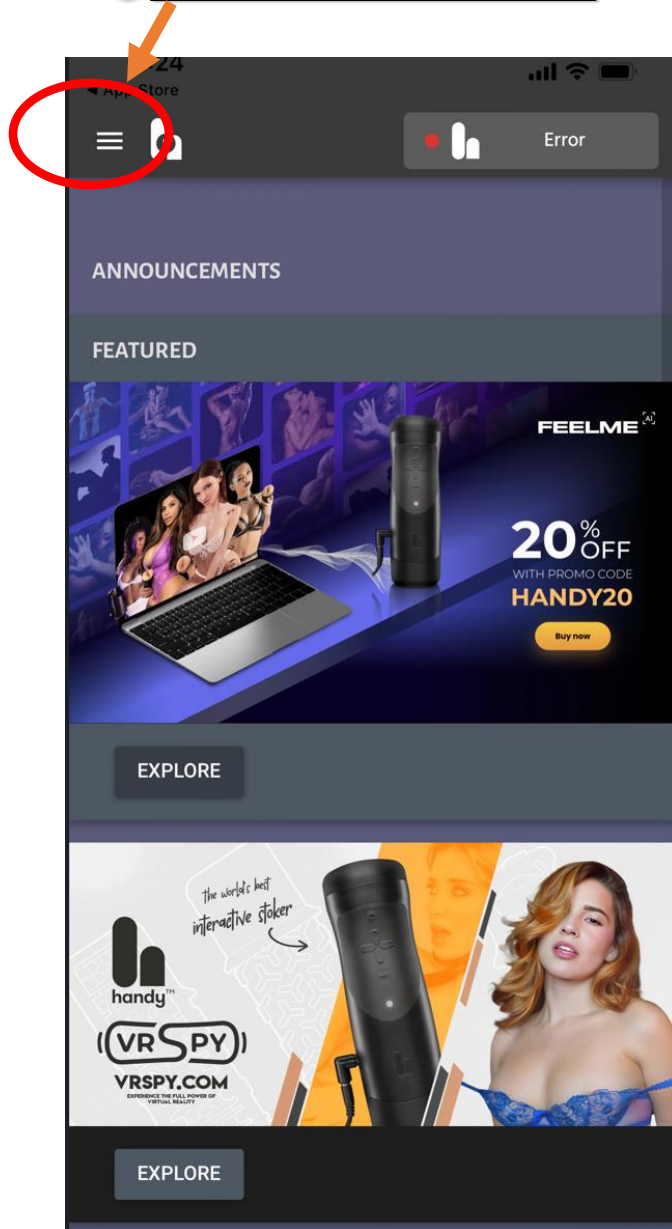


③ Configure Handyをクリック

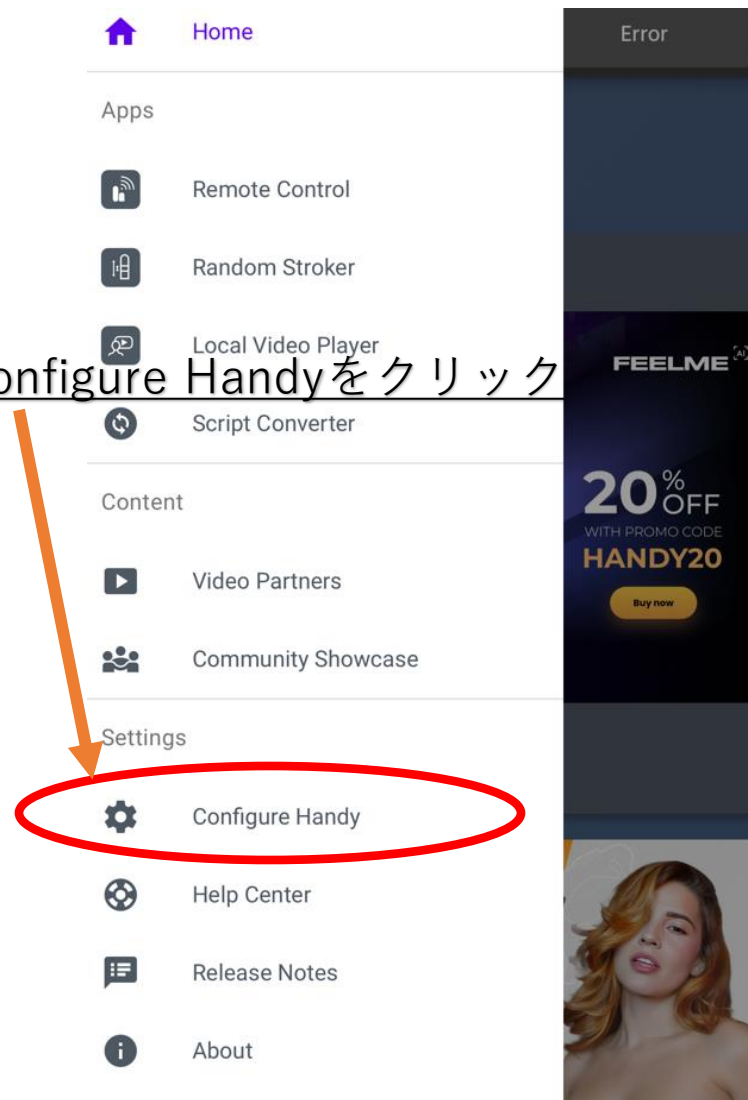





④ Handy本体の電源をいれる。  
(電源プラグを差し込む)

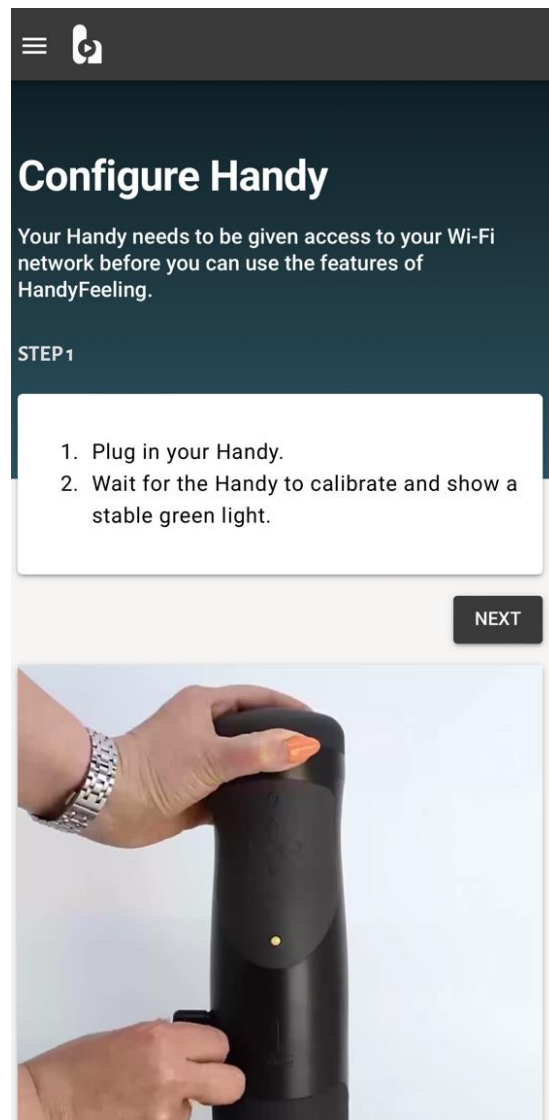

⑤ ランプの上のボタン(ーボタン)を  
長押しすると、ランプが青色に点灯。  
さらに、コネクトボタンをする。

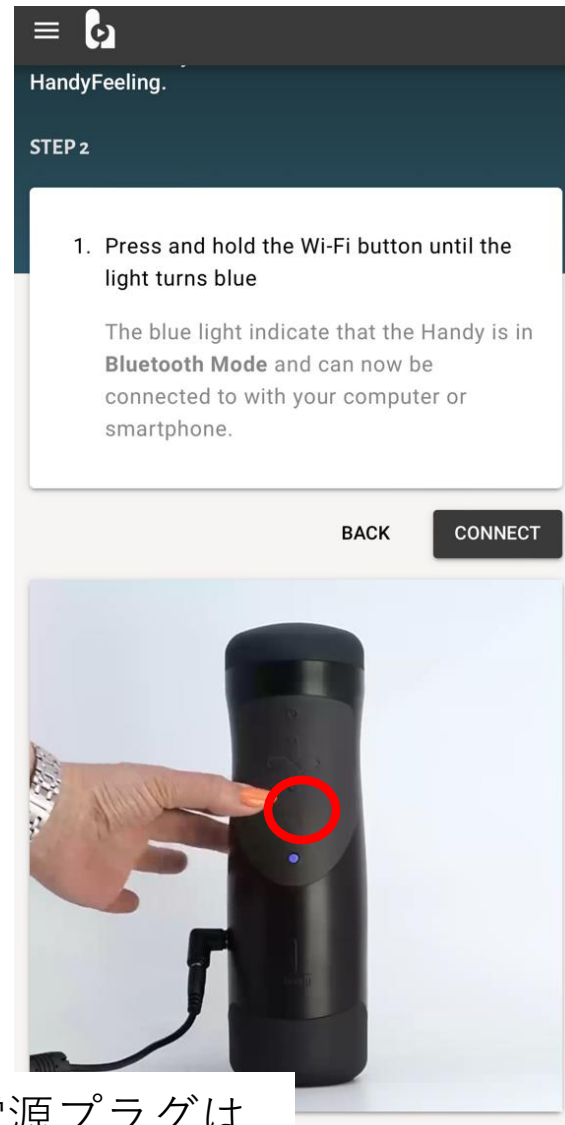


⑥ Handyが周辺のWiFiを捜索中

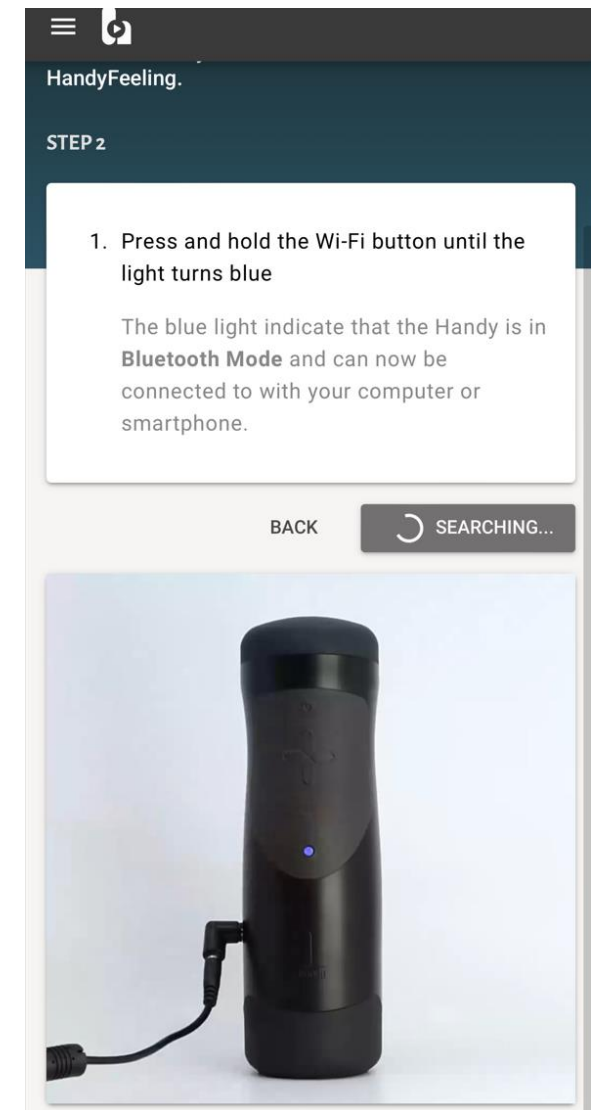


※ Handyに付属しているACアダプタと電源プラグは、  
Handy専用で且つ、セットでお使いください。他の電子機器ではご使用にならないでください。

⑦ Handyが初めてWi-Fiに接続する場合、Wi-Fiネットワークを選択する必要があるためREPLACE HANDY NETWORKを選択する。


※すでにハンディがWi-Fiと接続している場合は接続しているSSIDが表示される。

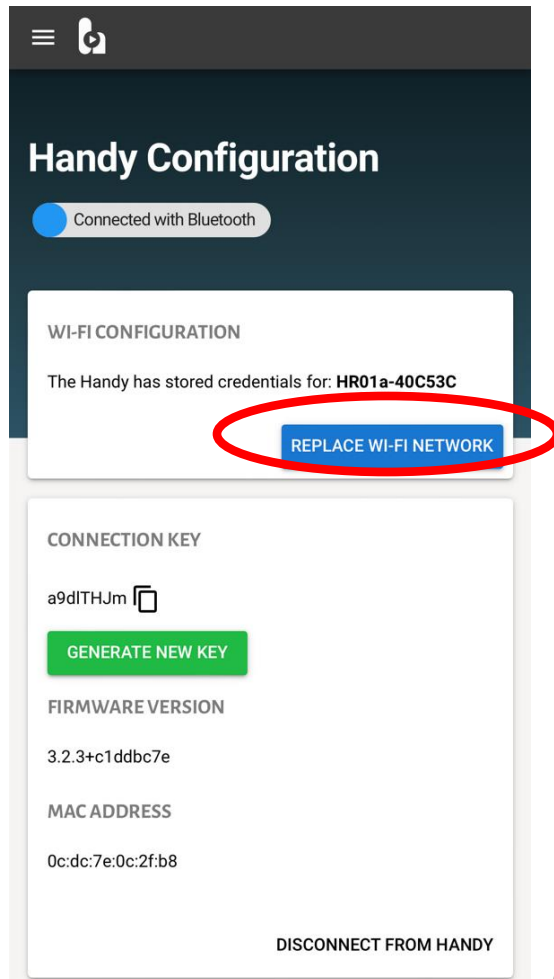



⑧ 今ご自身がいらっしゃる場所のWi-Fiネットワークを選択する。

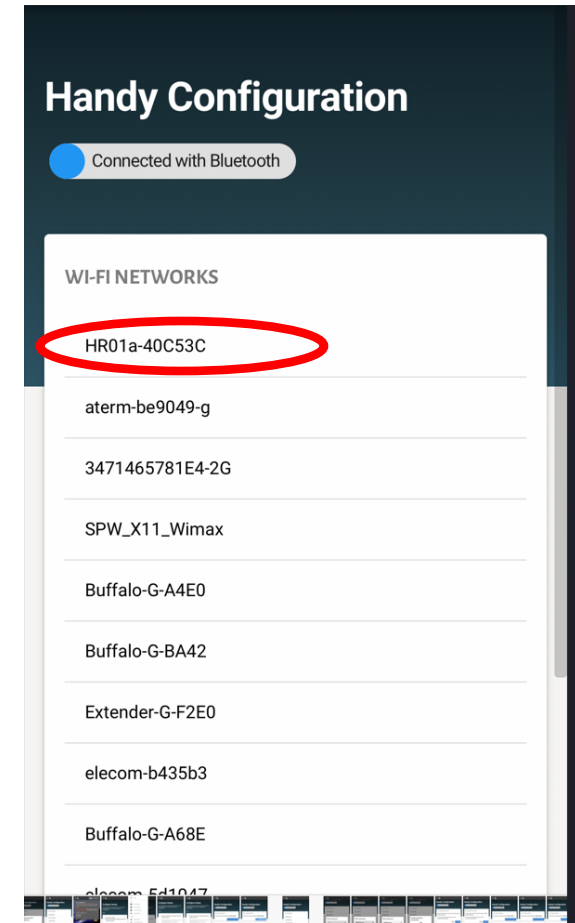


⑨ パスワードを入力し、DONEボタンを押す。

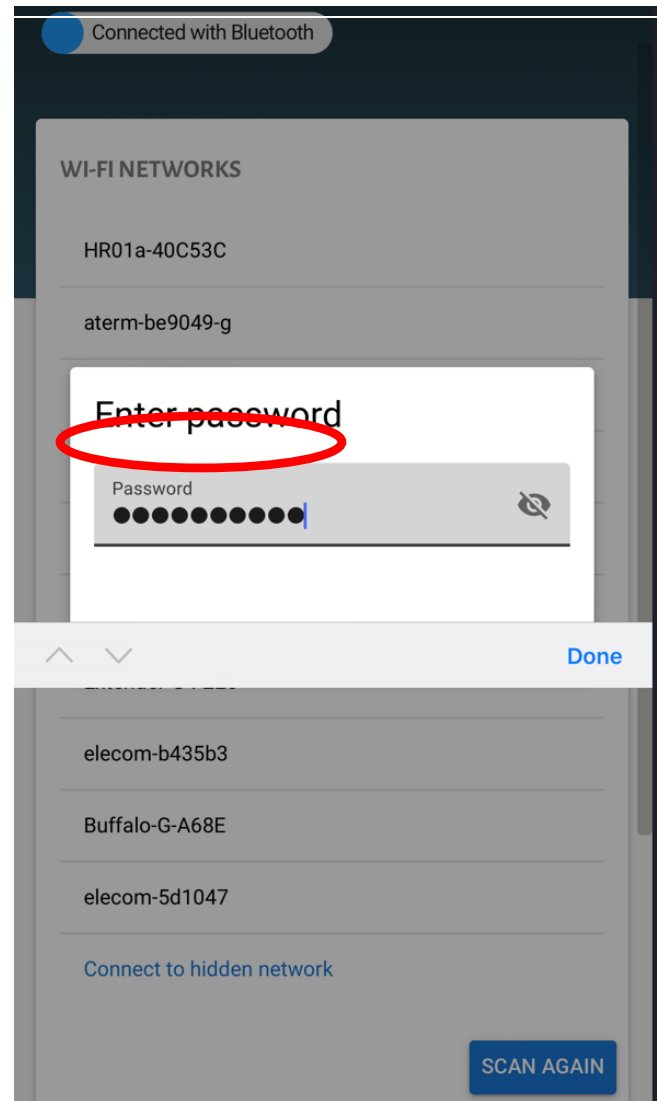

## ⑩ ネットワークを探し中

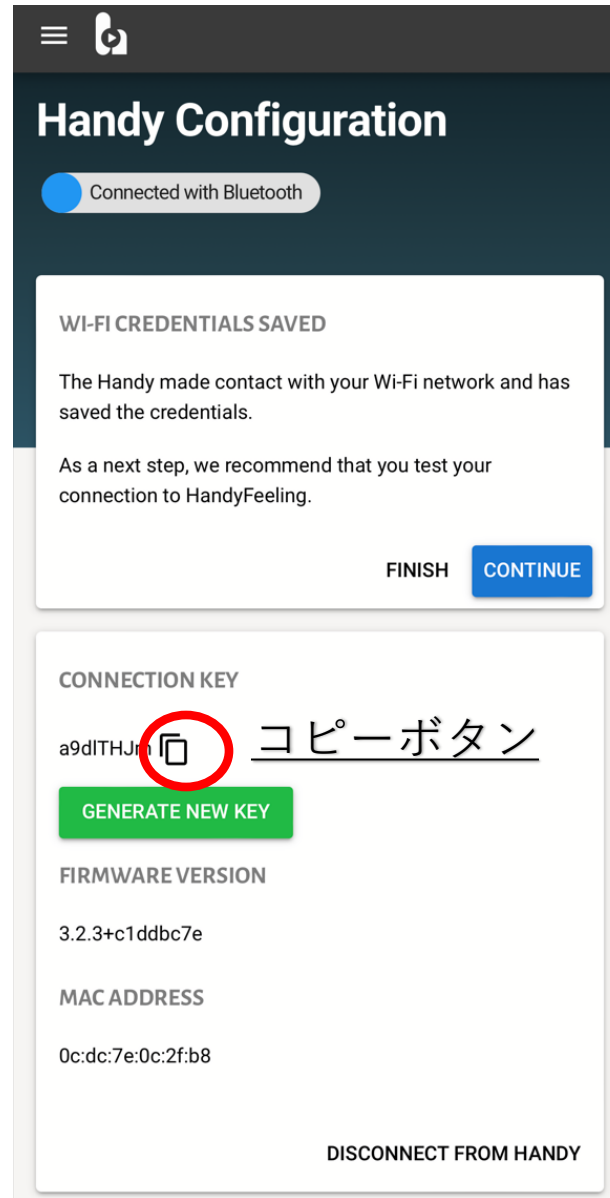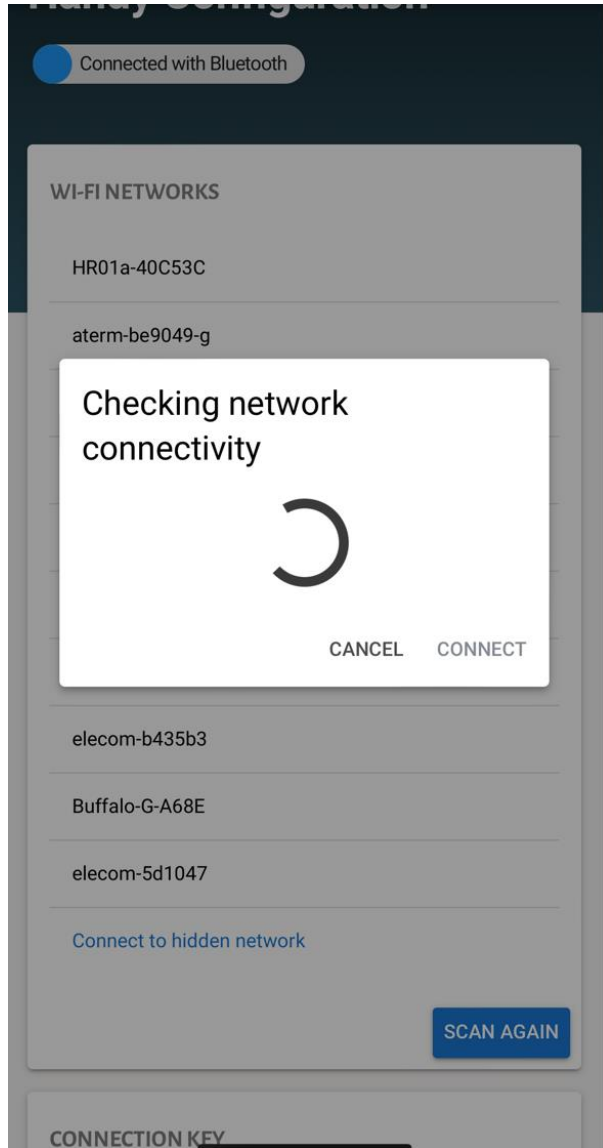


⑪ 正常にWi-FiにHandyが接続される。  
ここでコネクションキーをコピーしておく  
コピーするには、四角のコピーマークを  
クリックする。  
コピーされた場合  
画面下にcopiedという文字が表示される。

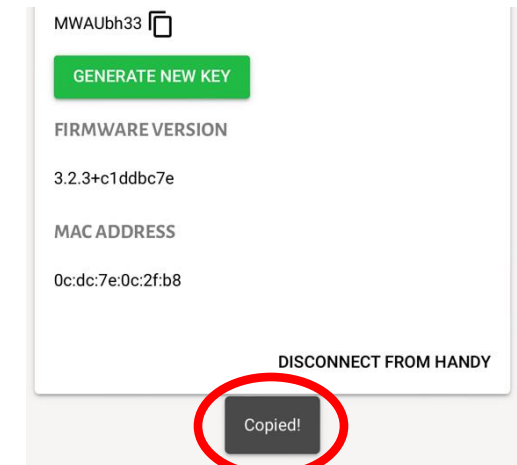


## 2.フェーズ2

アプリからHandyへの接続


⑫Handyの電源を入れるなおす。  
(Handyの電源プラグコンセントにセットする)  
LEDランプが緑に点灯する。

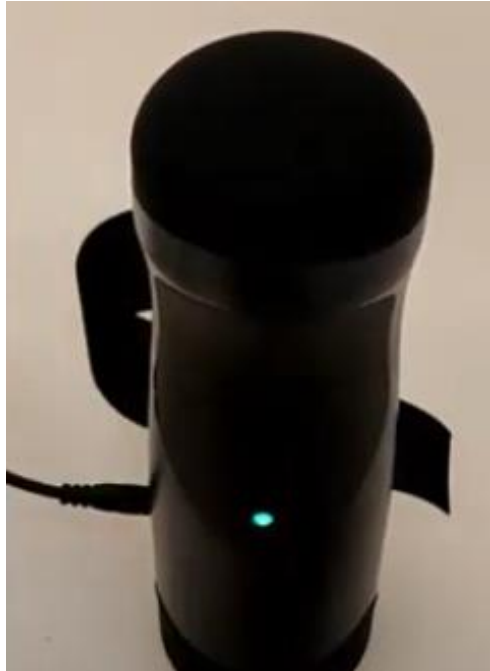


⑬HandyのWiFiボタンを  
1回軽く押すと紫のランプが点灯する。

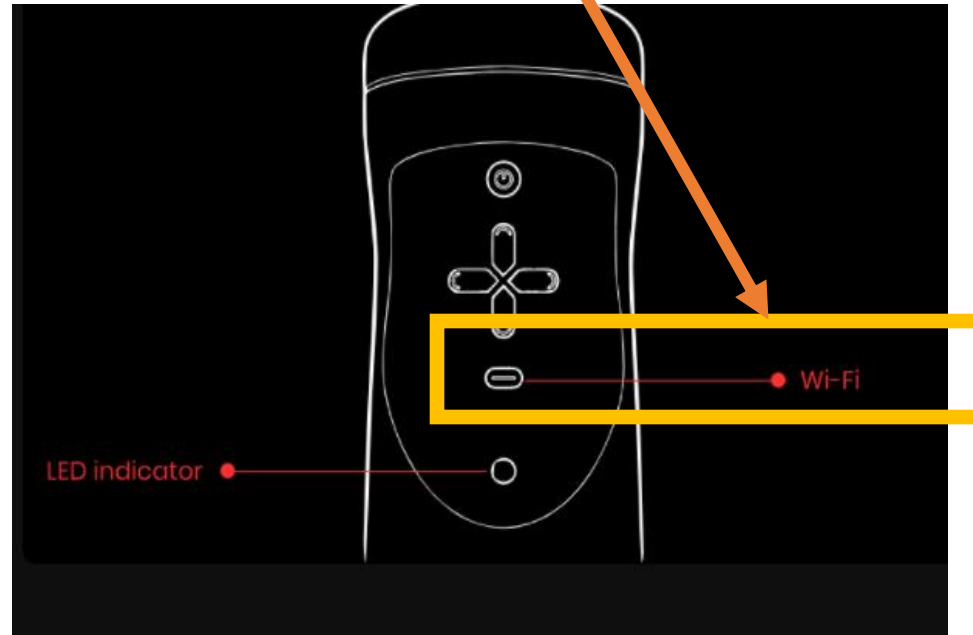


⑭Handyが、  
Wi-Fi接続モードに入った。

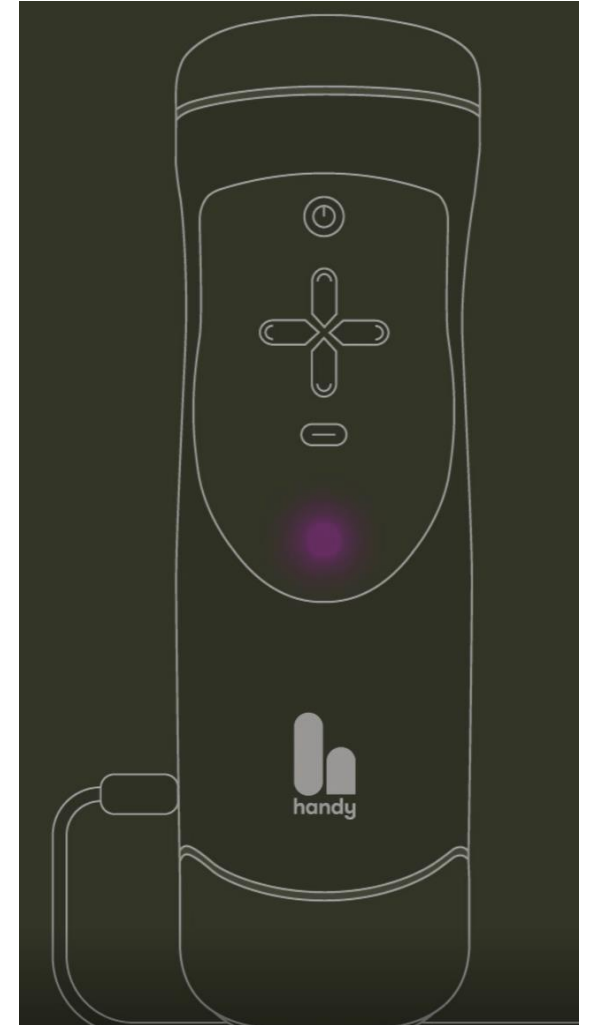


⑮画面の上部にあるHandyのアイコンをクリックする。

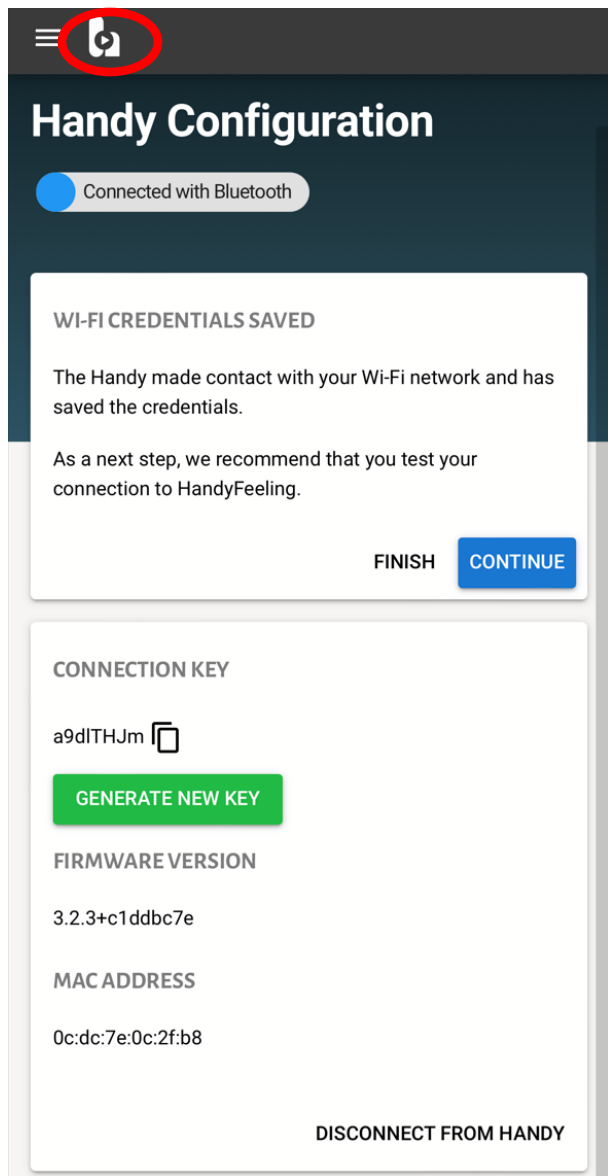


⑯上部のエラーのところをクリックする。

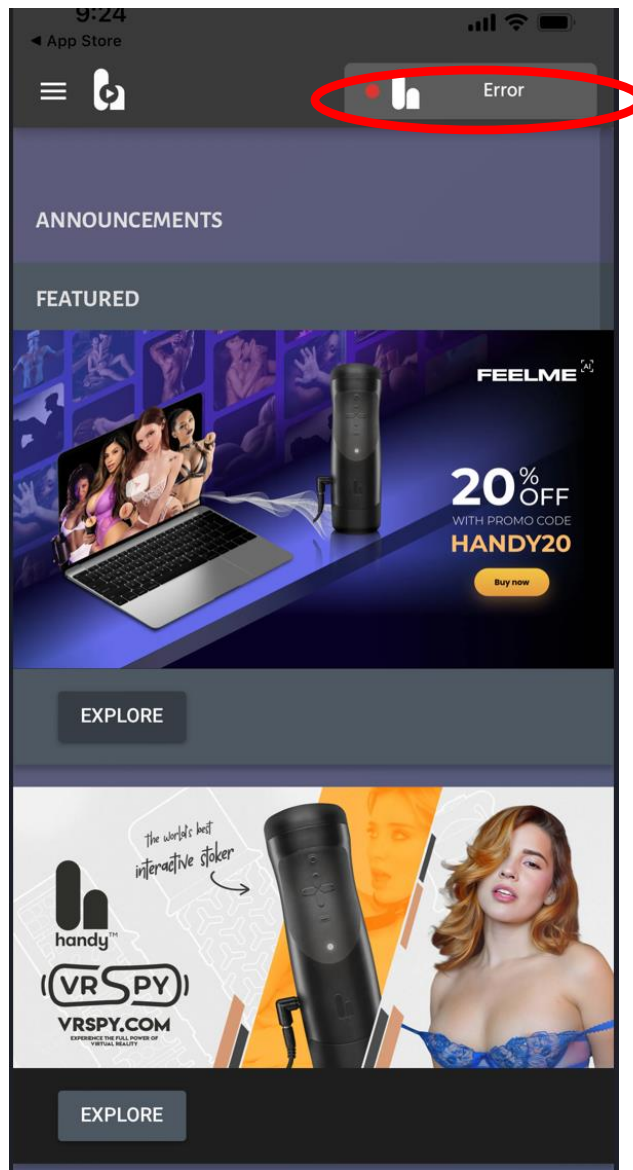



⑰フェーズ1の最後でコピーしたキーをここに入力し、リトライボタンを押す。

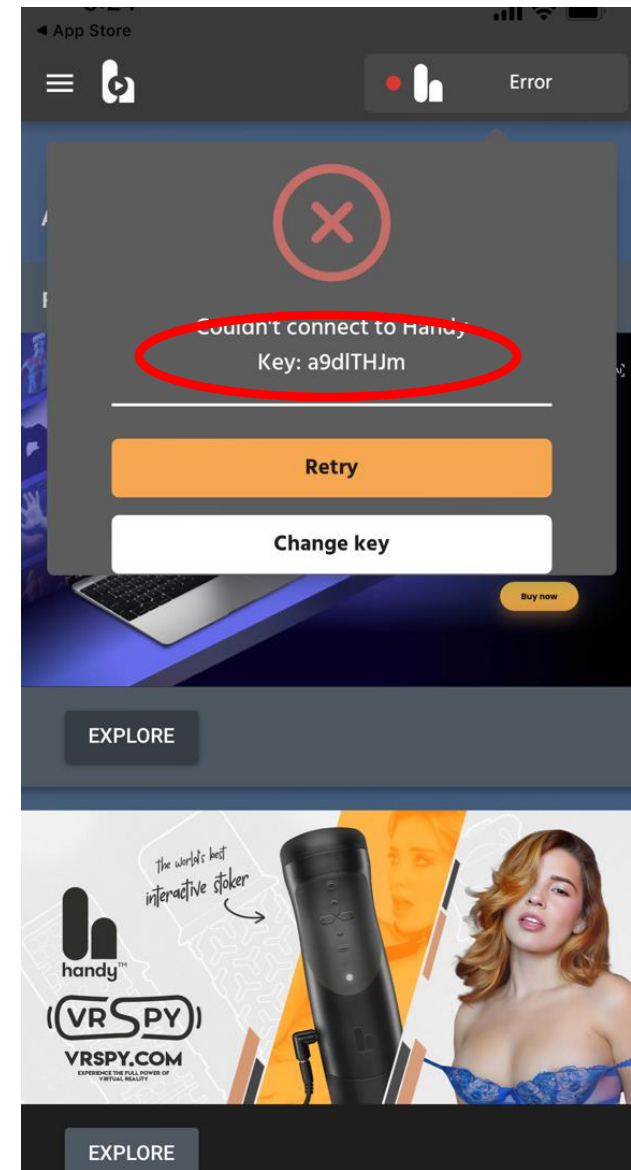

⑱キーをここに入力しConnectボタンを押下

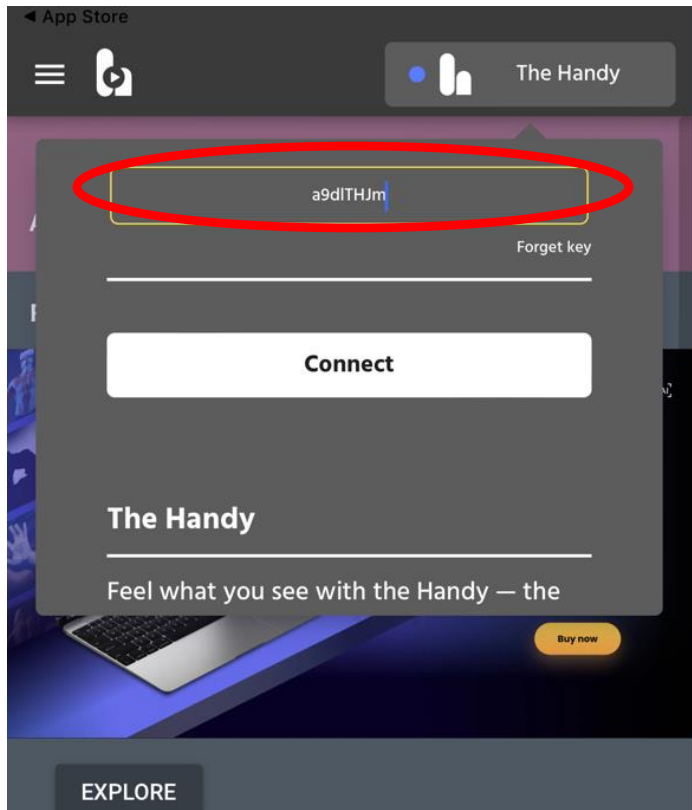


⑲成功すれば  
以下のような画面が表示される。

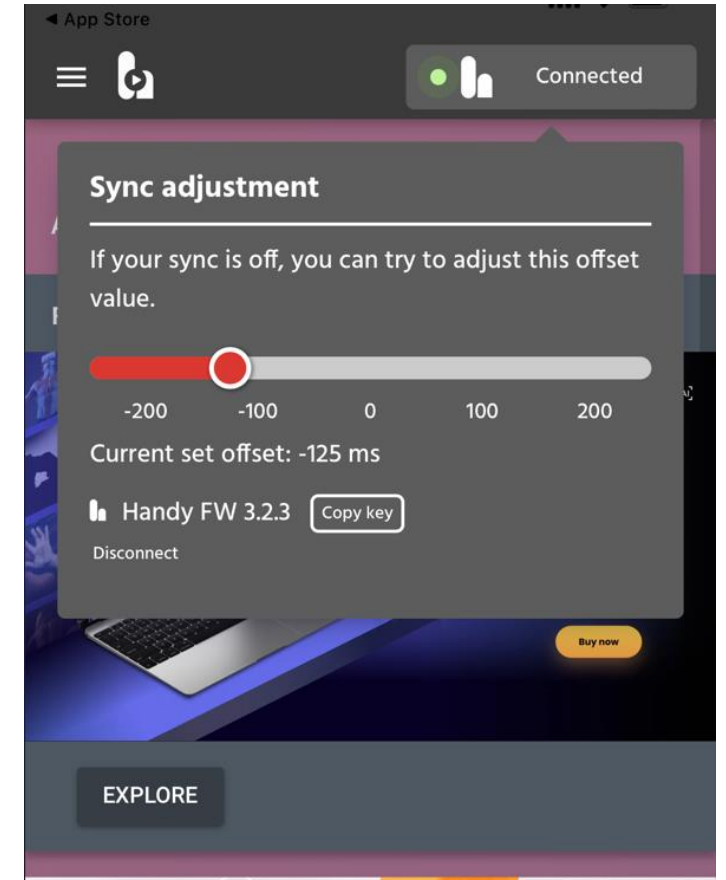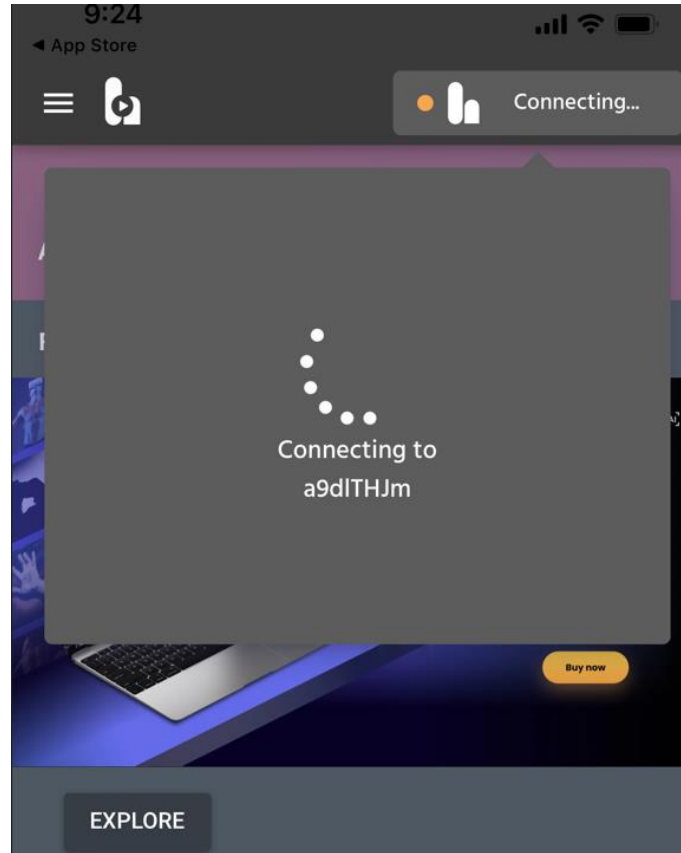




⑳メニュー画面で  
RemoteControlを選択

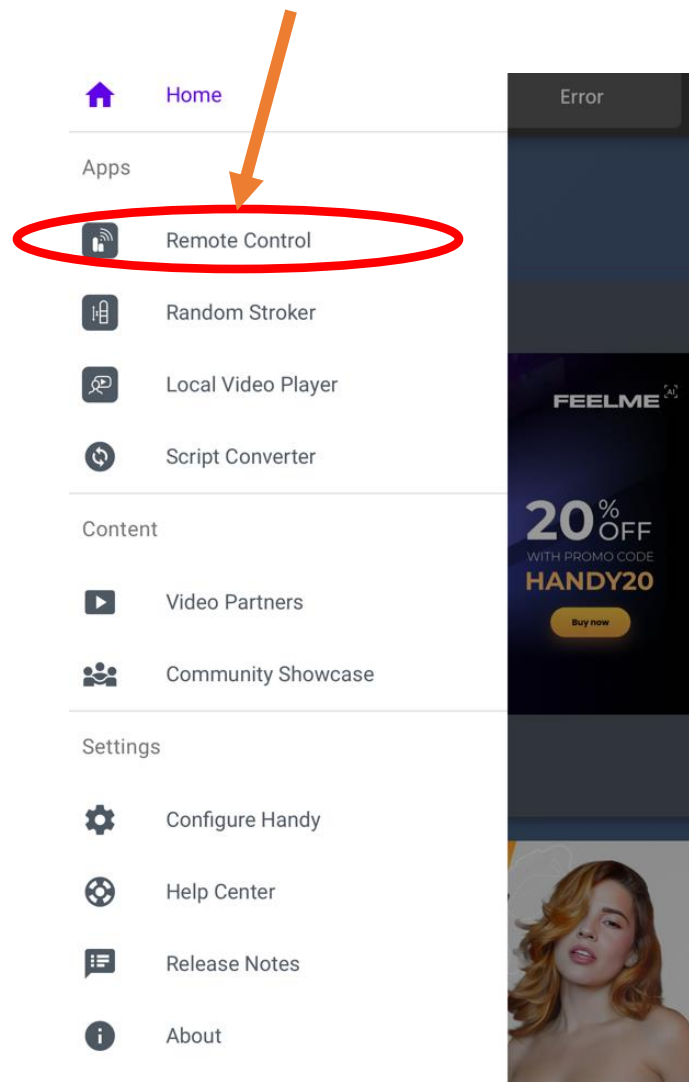

㉑HandyのRemoteControl機能で  
お好きな動画を楽しむ。

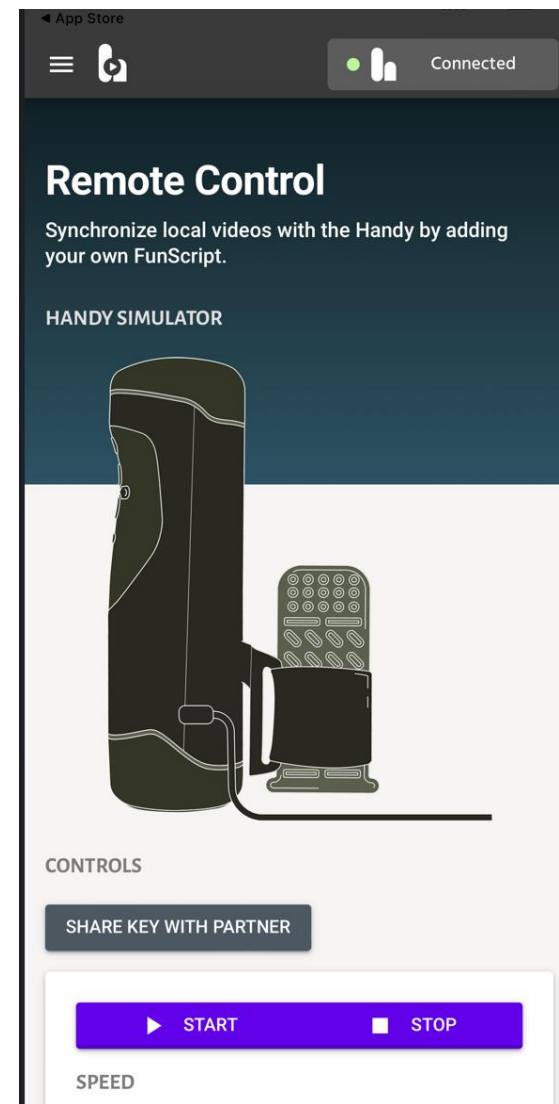

## (2) パソコンの場合


# 1. フェーズ1

PCとBluetooth機能を使  
使ったHandyのWi-Fi接続

① **HandyVerse** (<https://handyfeeling.com/>) にアクセスし、左メニューの**Configure Handy**の手順を進めます。電源プラグをHandyの本体にセットし、本体のランプは、緑色に点灯していることを、確認してください。

## Configure Handy

STEP 1/5  
POWER THE DEVICE



1. Plug in your Handy.
2. Wait for the Handy to calibrate and show a stable green light.

NEXT

Copyright © 2024 100years.jp All Rights Reserved.

② - ボタンを長押しすると、青色のライトが点灯する。

# Configure Handy

STEP 2/5

CONNECT TO BLUETOOTH



1. Press and hold the Wi-Fi button until the light turns blue

The blue light indicate that the Handy is in **Bluetooth Mode** and can now be connected to with your computer or smartphone.

BACK

CONNECT

③ コネクトボタン押下する。

# Configure Handy

STEP 2/5

CONNECT TO BLUETOOTH




1. Press and hold the Wi-Fi button until the light turns blue

The blue light indicate that the Handy is in **Bluetooth Mode** and can now be connected to with your computer or smartphone.

BACK

CONNECT

④SARCHINGの表示とともに、ペアリングの画面が出てくる。

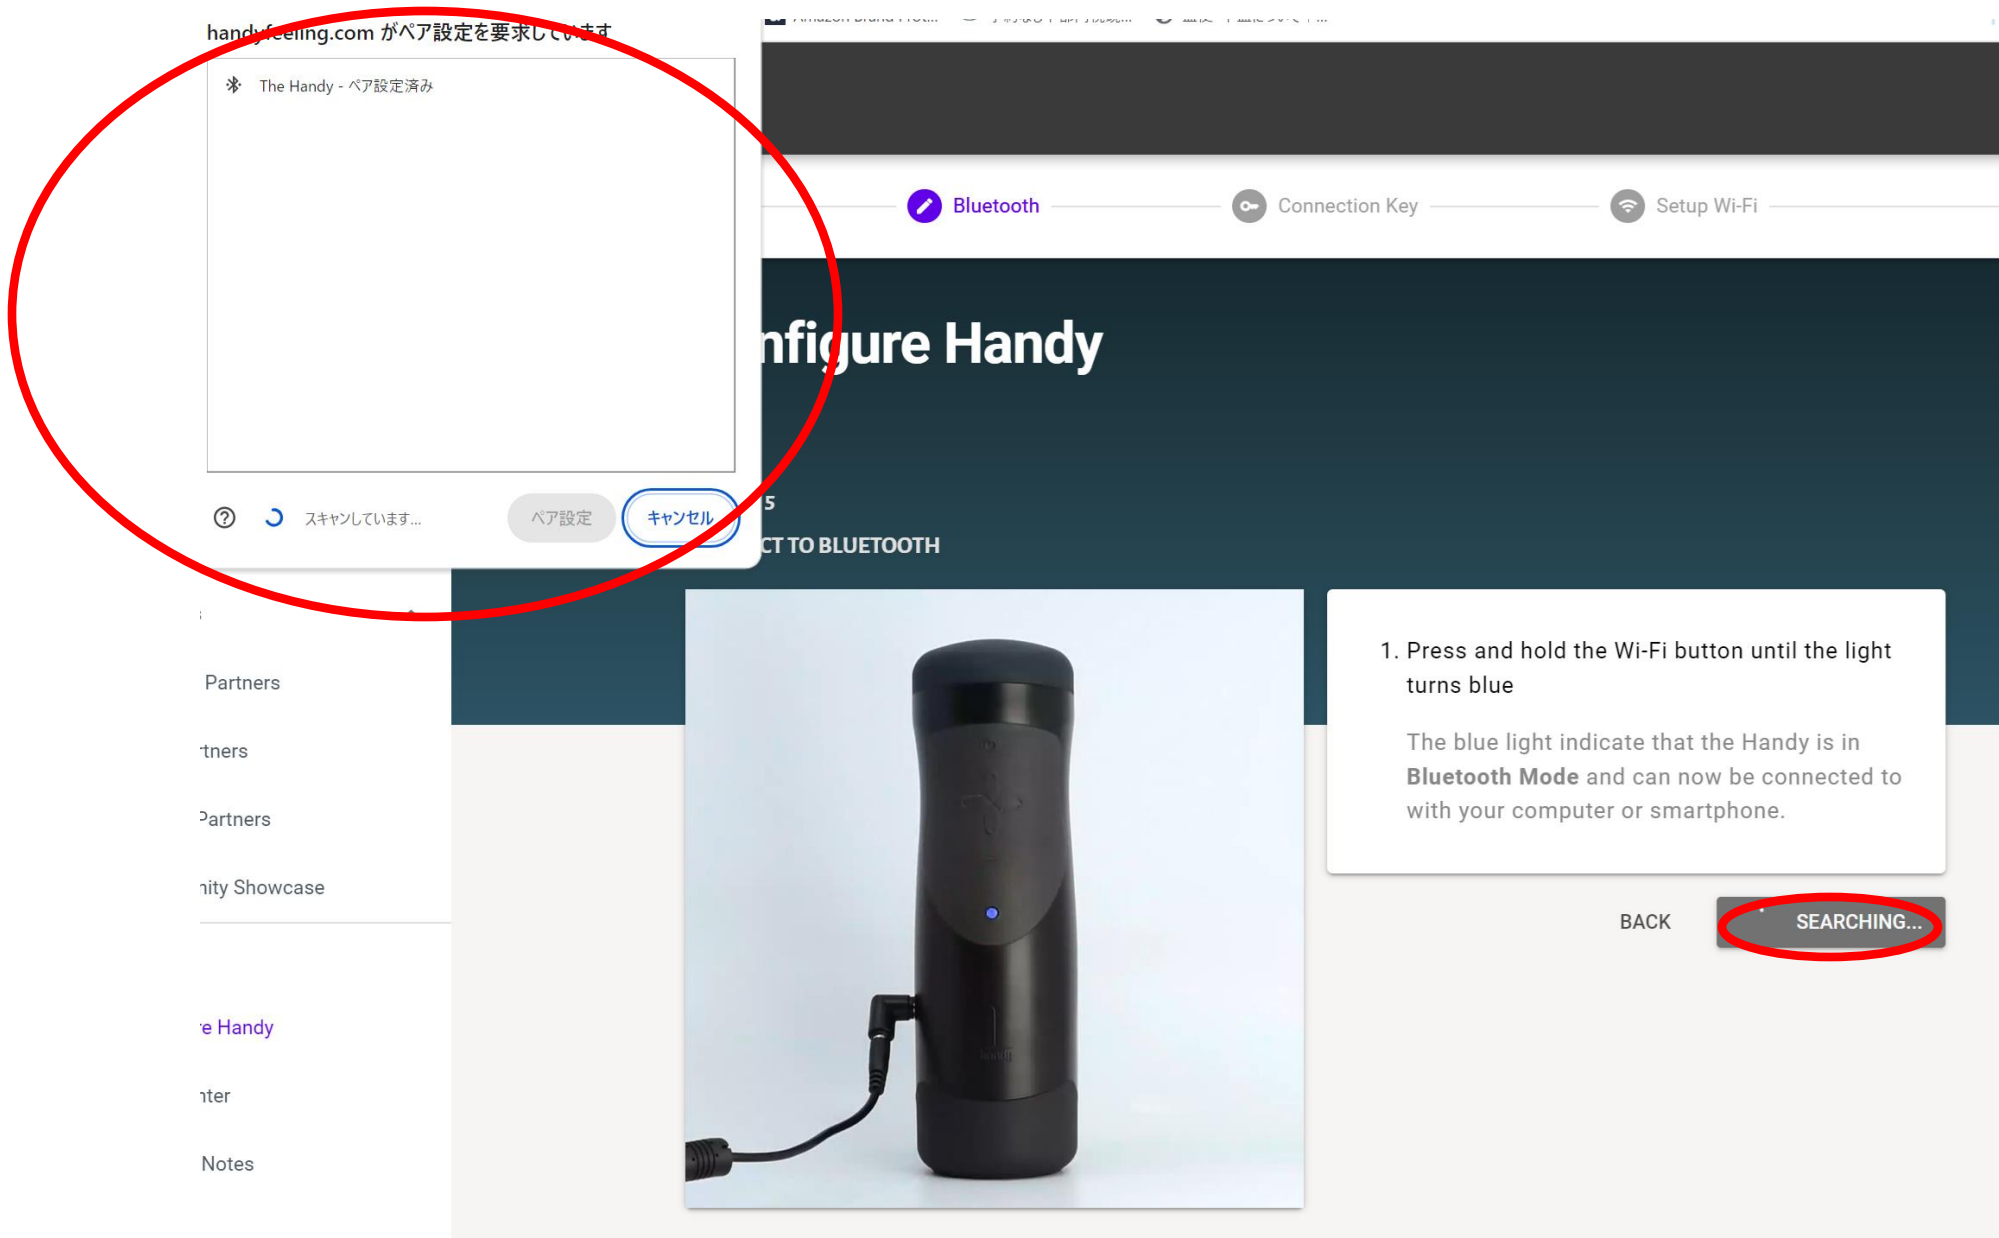

⑤TheHandyを選択し、ペア設定ボタンを押下する。





⑥ここで、表示される接続キーは、HandyのWiFi接続時に必要になるため、コピーしておく。

# Configure Handy

STEP 3/5

## CONNECTION KEY

### CONNECTION KEY

YwgXAUta

GENERATE NEW KEY

### FIRMWARE VERSION

3.2.1+e46631cd

### MAC ADDRESS

ec:62:60:e7:25:7c

1. Take note of your connection key.

The connection key is used for connecting your Handy to online services.

BACK

NEXT

⑦コピーボタンを押下すると、コピーされたことがわかる。NEXTボタンを押下する。

# Configure Handy

STEP 3/5

CONNECTION KEY

CONNECTION KEY

YwgXAUTA



GENERATE NEW KEY

FIRMWARE VERSION

3.2.1+e46631cd

MAC ADDRESS

ec:62:60:e7:25:7c

1. Take note of your connection key.

The connection key is used for connecting your Handy to online services.

BACK

NEXT

Copied!

Copyright © 2024 100years.jp All Rights Reserved.

⑧づついて、HandyをWiFi接続します。以下のADD WiFi NETWORK TO HANDYボタンを押下する。

# Configure Handy

STEP 4/5

CONNECT TO WI-FI

## WI-FI CONFIGURATION

The Handy doesn't have any Wi-Fi networks stored.

**ADD WI-FI NETWORK TO HANDY**

1. Connect your Handy to a Wi-Fi network.

If you already have connected the Handy to a Wi-Fi network, you may skip this step.

BACK

NEXT

⑨ご自身がいらっしゃる場所のWiFiのSSIDを選択し、NEXTボタン押下し、WiFiのキーを入力する。

# Configure Handy

STEP 4/5  
CONNECT TO WI-FI

**WI-FI NETWORKS**

- HR01a-40C53C
- aterm-be9049-g
- 9CFB7798FF5F-2G
- Buffalo-G-BA42
- elecom-b435b3
- Buffalo-G-A4E0
- SPW\_X11\_Wimax
- Extender-G-F2E0


1. Connect your Handy to a Wi-Fi network.

If you already have connected the Handy to a Wi-Fi network, you may skip this step.

BACK **NEXT**

Copyright © 2024 100years.jp All Rights Reserved.

⑩ 接続中のアナウンスが表示される。

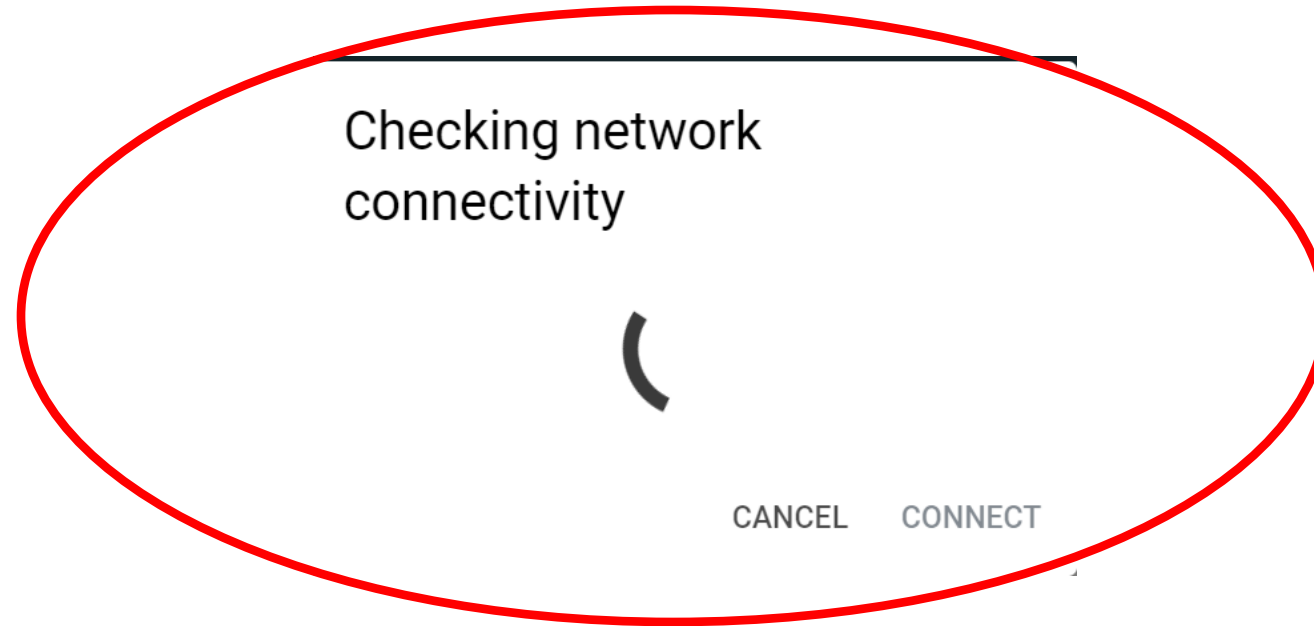

⑪Handyが、WiFiに接続したことを確認する。ここで、フェーズ1は終了です。

# Configure Handy

STEP 4/5

CONNECT TO WI-FI

**WI-FI CREDENTIALS SAVED**

The Handy made contact with your Wi-Fi network and has saved the credentials.

SCAN AGAIN

1. Connect your Handy to a Wi-Fi network.

If you already have connected the Handy to a Wi-Fi network, you may skip this step.


BACK

NEXT



## 2. フェーズ2

# PCからHandyへの接続


⑫Handyの電源を入れるなおす。(Handyの電源プラグコンセントにセットする)  
LEDランプが緑に点灯する。

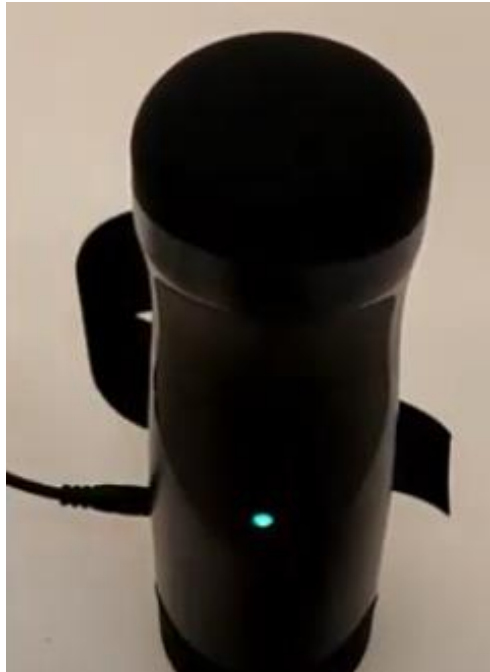

⑬HandyのWiFiボタンを、1回軽く押す  
紫のランプが点灯する。

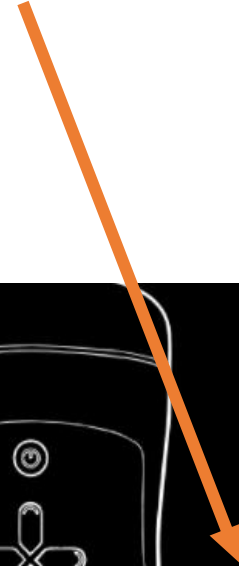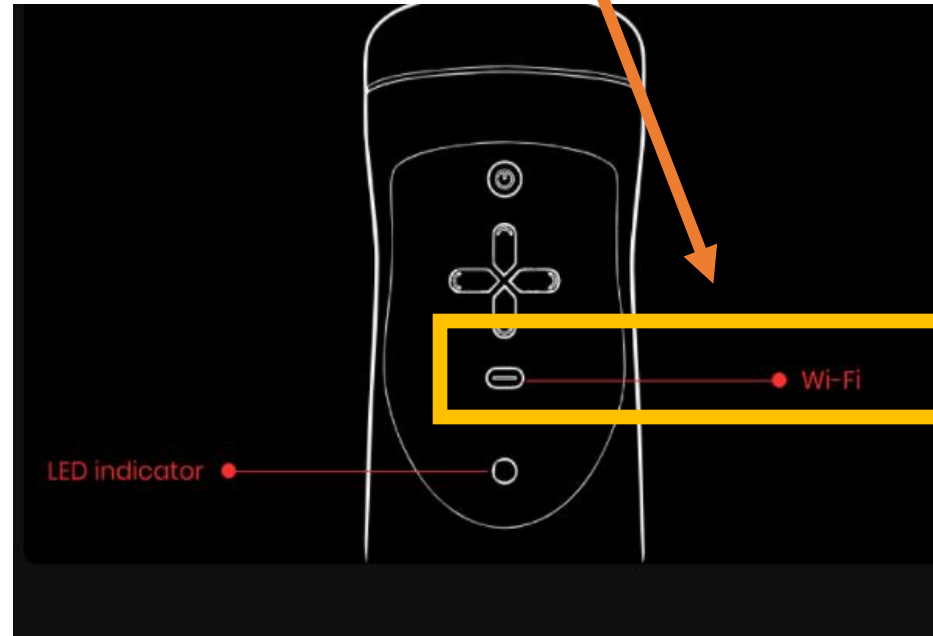


⑭Handyが、Wi-Fi接続モードに入った。

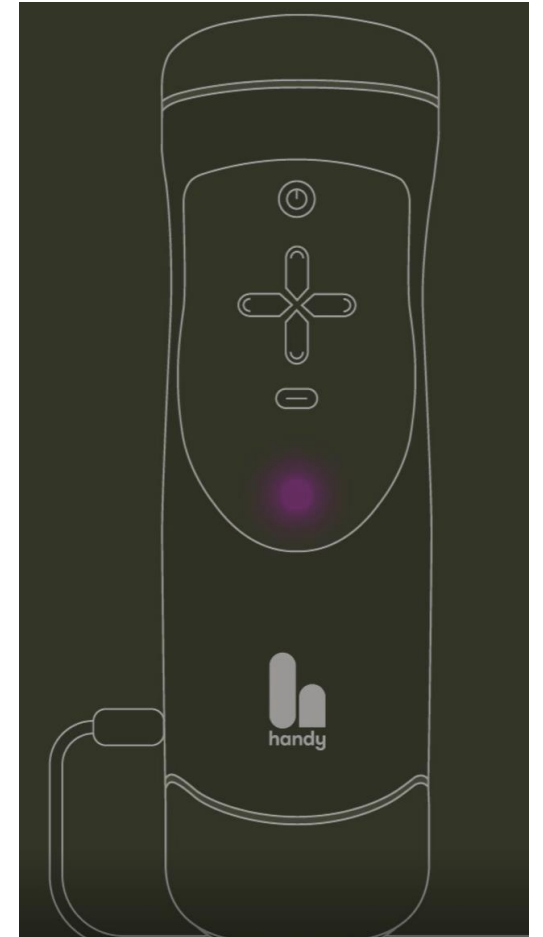






⑮ <https://handyfeeling.com/> に接続し、Errorのところをクリックする。

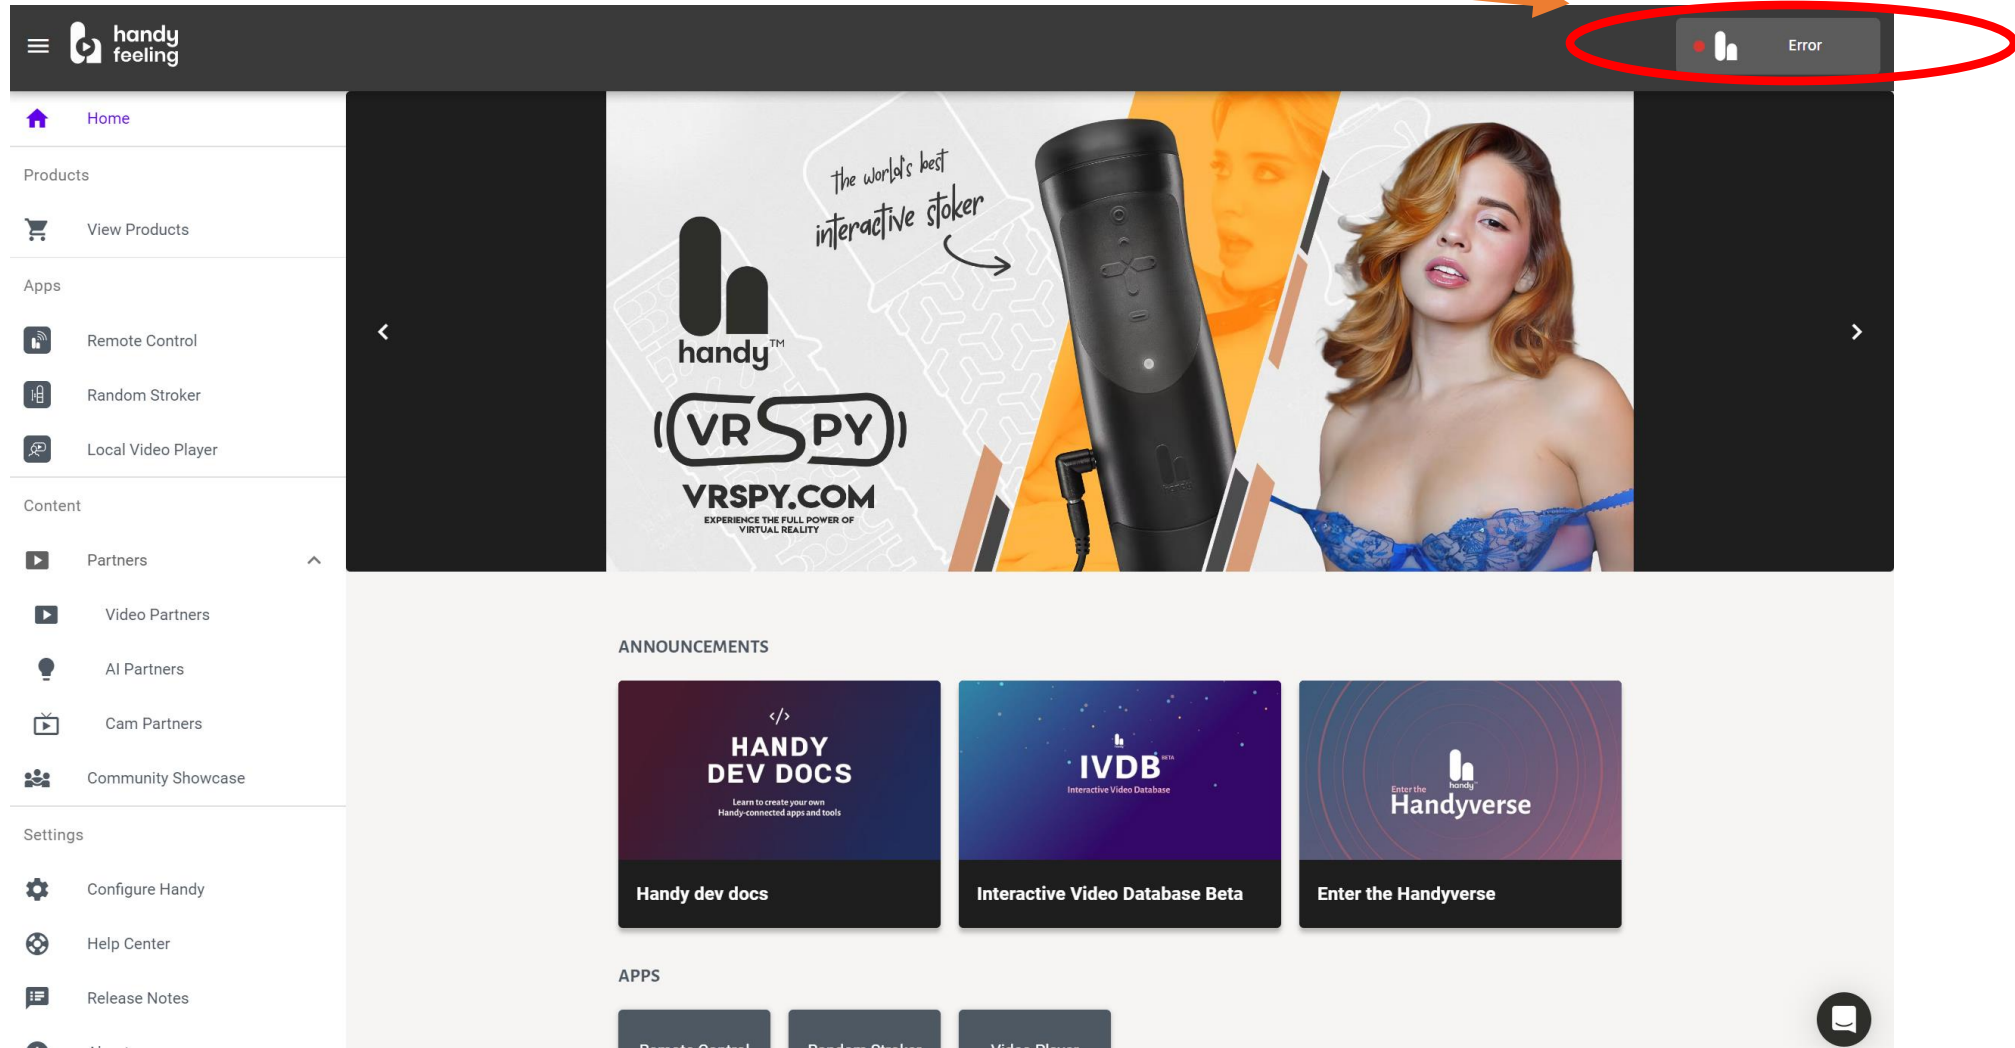

⑩ChangeKeyをクリックする。

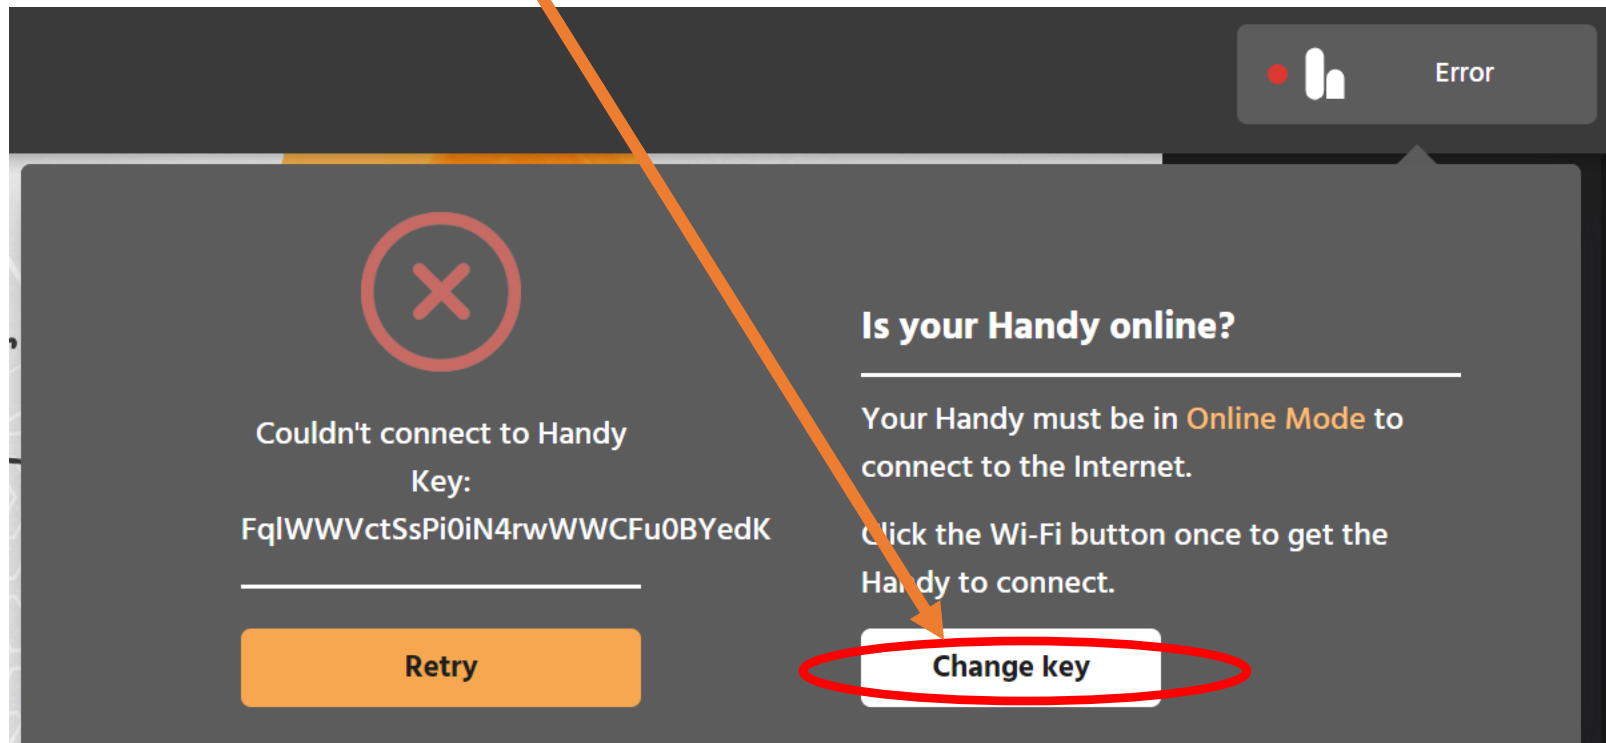


⑰フェーズ1でコピーしたキーを、入力し、Connectボタンを押下する。

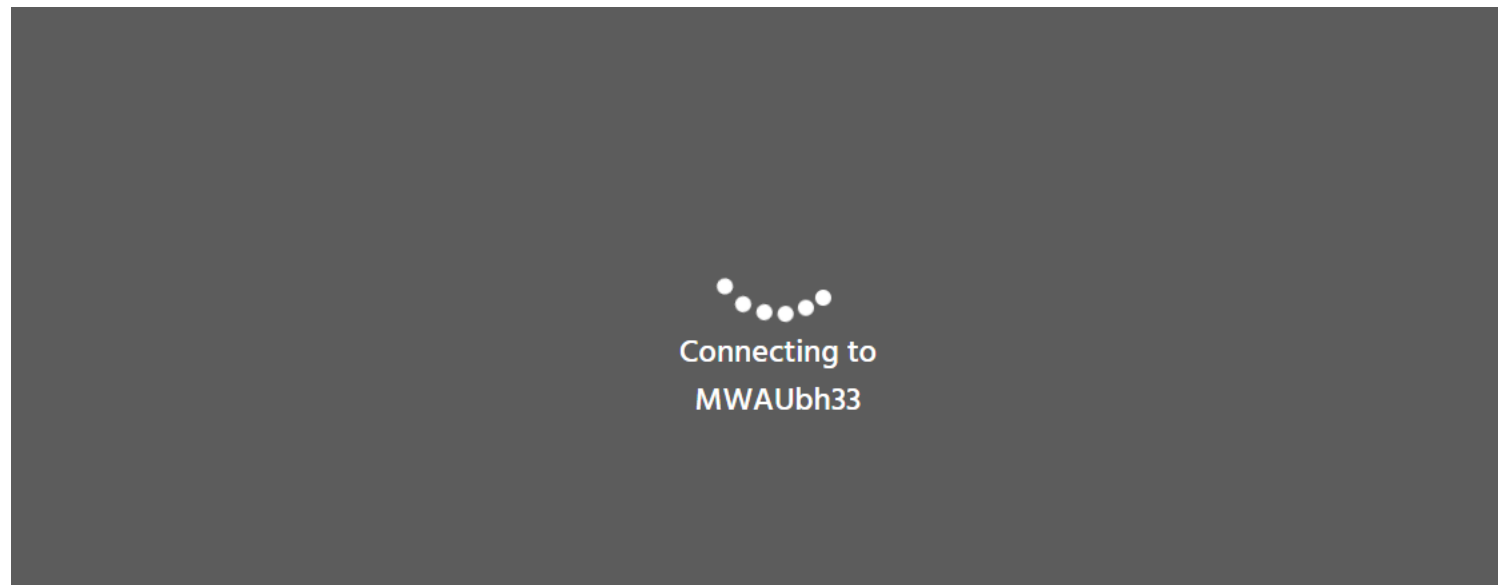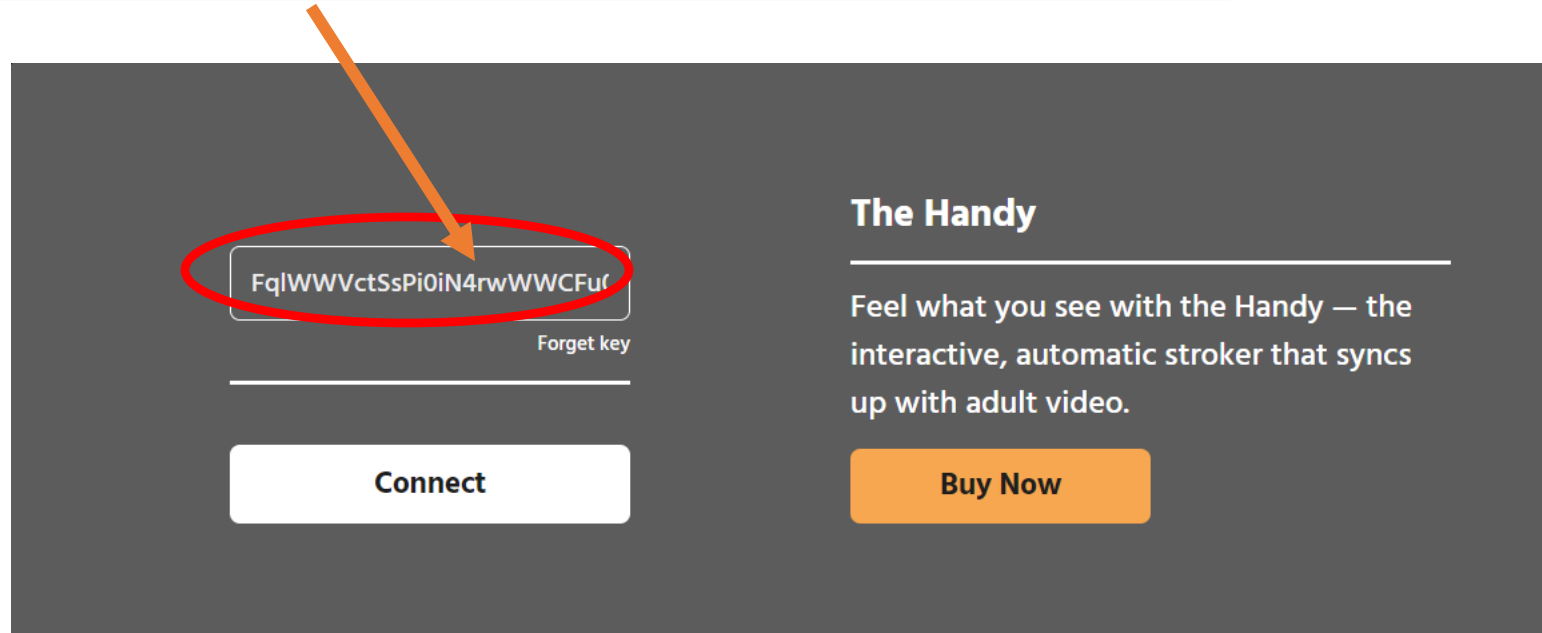

⑱成功すればこのような画面が表示されるので、△の部分をクリックすると、この表示は消える。

The screenshot shows the Handy Feeling web application interface. On the left is a navigation sidebar with categories: Home, Products (View Products), Apps (Remote Control, Random Stroker, Local Video Player), and Content (Partners, Video Partners, AI Partners, Cam Partners, Community Showcase). The main content area features a dark background with a 'FEEL VR PORN' logo and a 'seamless' text. A settings overlay is displayed in the center, containing three panels: 'Sync adjustment' with a slider from -200 to 200 (set at 0 ms), 'Stroke adjustment' with a slider from 0 to 100 (set at 0-100%), and 'Resync' with a 'Sync Test' button and a latency of 300.00 ms. A 'Connected' status indicator with a green dot and a bar chart icon is circled in red in the top right corner. Below the settings, there is a purple button labeled 'handy30free' and an 'ANNOUNCEMENTS' section with three cards: 'HANDY DEV DOCS', 'IVDB BETA Interactive Video Database', and 'Enter the Handyverse'.

⑱ RemoteControlボタンをクリックする。

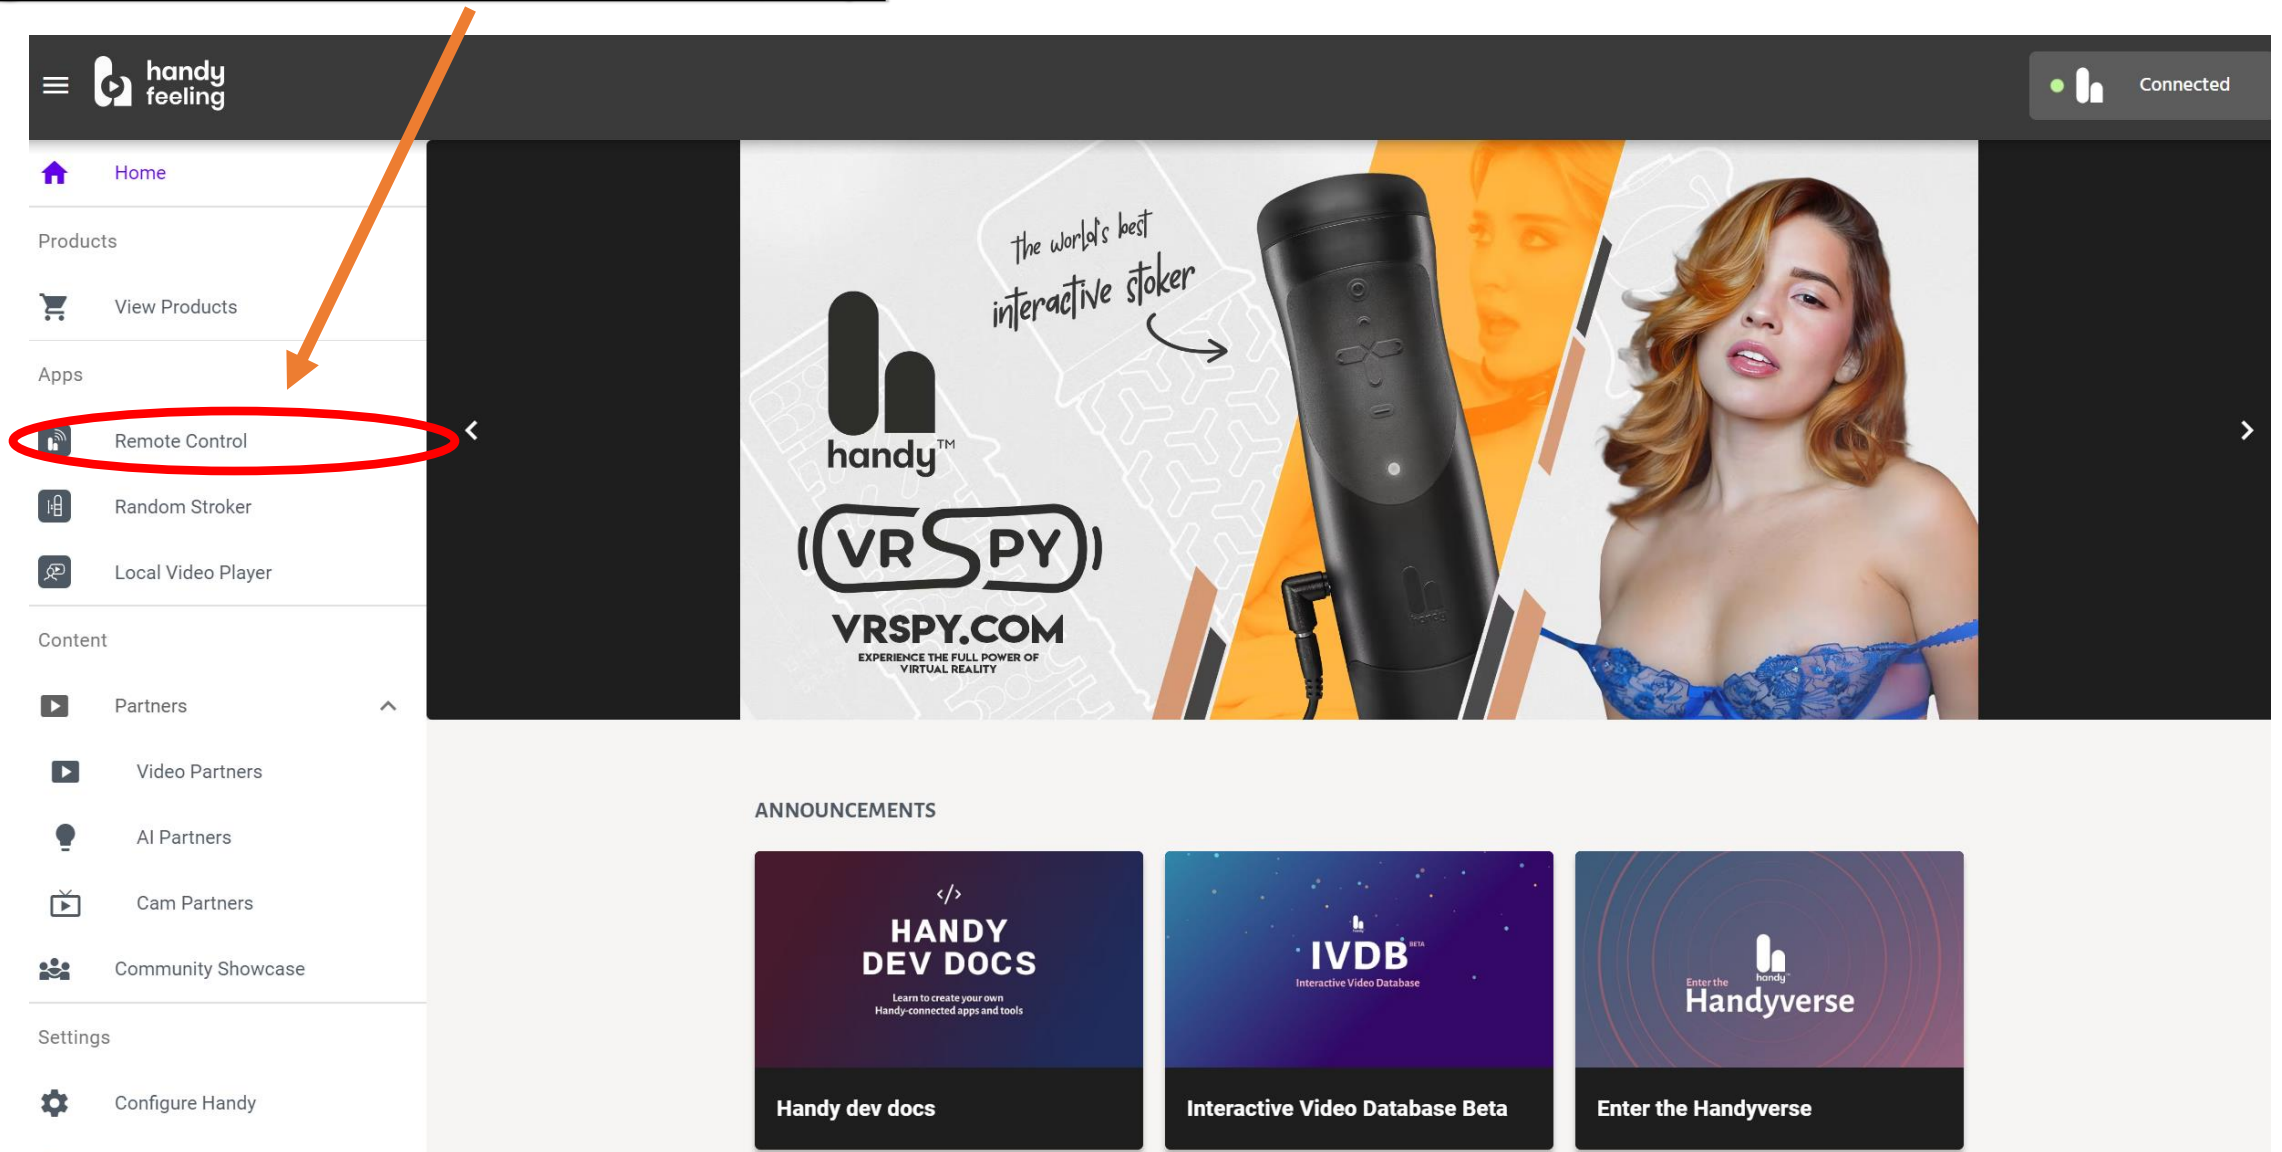

## ②① HandyのRemoteControl機能でお好きな動画を楽しむ。

The screenshot displays the Handy Remote Control application interface. On the left is a navigation sidebar with categories: Home, Products (View Products), Apps (Remote Control, Random Stroker, Local Video Player), Content (Partners, Video Partners, AI Partners, Cam Partners, Community Showcase), and Settings (Configure Handy). The main content area features a dark header with the 'handy feeling' logo and a 'Connected' status indicator. Below the header, the title 'Remote Control' is followed by the text 'Share your connection key with a partner and let them take control.' The central 'HANDY SIMULATOR' shows a stylized illustration of a handheld device connected to a smartphone. To the right, the 'CONTROLS' panel includes a 'SHARE KEY WITH PARTNER' button, a purple 'START' button with a play icon and a 'STOP' button with a square icon, a 'SPEED' slider, and a 'STROKE' slider. At the bottom, a 'PRESETS' section shows two preset cards with blue and red circular indicators.